

System updates

Your Altion Voltage Regulator is designed to keep itself up-to-date, ensuring you have the latest features, performance improvements, and security fixes. You can choose between automatic updates (if internet connected) or manual updates as needed.

Automatic updates

- **Enabling automatic updates:** From the Update section of the regulator's web interface, select the "Enable Automatic Updates" checkbox. Your regulator will now periodically check for new updates, and if available, download and install them seamlessly.
- **Benefits:** This is the most convenient way to stay current. You'll get critical security updates and new features without any extra effort.
- **Requirement:** Your regulator must have a reliable internet connection for automatic updates to function.

Manual Updates

1. **Download the update:** Visit the Revatek website (revatek.com) and navigate to the support section for your regulator model. Download the latest firmware file.
2. **Upload to the regulator:** On the System page of the regulator's web interface, you'll find a section labeled "Manual Update". Click the "Choose File" button, select the downloaded firmware file, and click "Upload".
3. **Installing the update:** Your regulator will handle the installation process. This may involve a reboot, during which the regulator will be temporarily unavailable.

Do not interrupt updates: Avoid powering off the regulator or interrupting the update process once it has started. This could damage your system.

Check for release notes: Before updating (either method), visit the Revatek website to read the release notes for the new firmware. This will inform you about new features.

Revision #2

Created 6 April 2024 03:47:41 by Greg Revelle

Updated 6 April 2024 03:50:57 by Greg Revelle